


Operation Manual

1. Functions

1. LCD Display
2. Friction Drive
3. Quick Drive
4. ON/OFF.....SET key
5. ABS/INC.....UNIT key

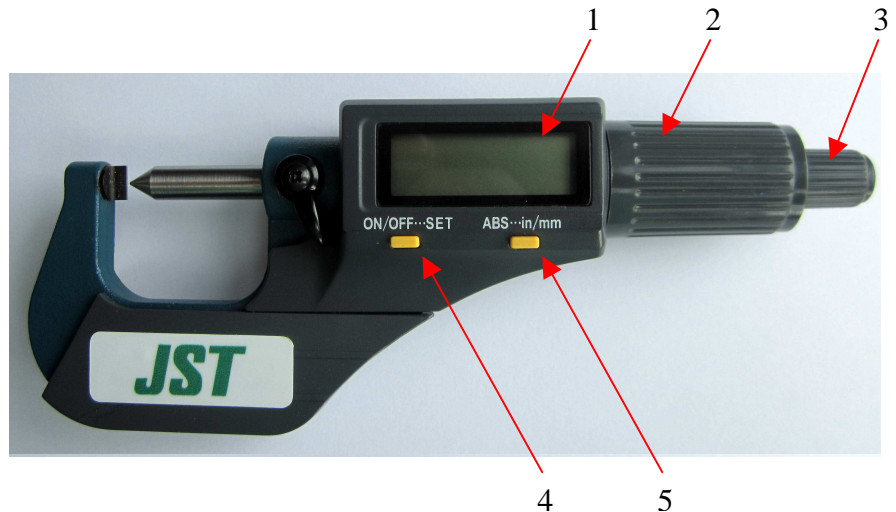

2. Function Keys

- (4) **ON/OFF.....SET key**
 - Press once to switch ON, press again to switch OFF
 - Press and hold for 3 seconds to reset the absolute zero position*
- (5) **ABS/INC.....UNIT key**
 - Press once and release to switch between absolute and relative measuring mode.
The "INC" sign is displayed on the LCD when the relative measuring mode is active.
 - Press and hold for 3 seconds to switch between Metric (MM) and imperial (Inches)

*To reset the absolute zero position

- Slowly turn the "friction drive" until it touches the anvil
- Listen for 3 clicks
- Push and hold down the ON/OFF button for 5 seconds
- The display will reset to zero

4. LCD Display

- **"INC" : Relative measuring mode**
- **"IN" : unit of measurement; inches**
- **"MM" : unit of measurement; Millimeters**

5. Power

- A lithium battery (CR2032) is located in the back of the Micrometer.
- Replace the battery when the display data is dim or flashing.
- The Micrometer will automatically power "OFF" after 5 minutes, when not in use.

NEVER TIGHTEN THE MEASURING POINT ONTO THE ANVIL USING THE QUICK DRIVE METHOD. THIS ACTION WILL ULTIMATELY RESULT IN IRREVERSABLE DAMAGE TO THE ANVIL.